

## Universal rotary dimmer comfort

Art. no.: 2961 10, 2944 10, 2944 11, 2944 2045, 2944 2089

#### Operating instructions

## 1 Safety instructions



Electrical devices may only be mounted and connected by electrically skilled persons.

Serious injuries, fire or property damage possible. Please read and follow manual fully.

Danger of electric shock. Always disconnect before carrying out work on the devise or load.

Danger of electric shock. Device is not suitable for disconnection from supply voltage. The load is not electrically isolated from the mains even when the device is switched off.

Risk of destruction if the set operating mode and load type do not match. Set correct operating mode when connecting or exchanging the load.

Fire hazard. For operation with inductive transformers, each transformer must be fused on the primary side in accordance with the manufacturer's instructions. Only safety transformers according to EN 61558-2-6 may be used.

These instructions are an integral part of the product, and must remain with the end customer.

## 2 Intended use

- Switching and dimming of lighting
- Mounting in appliance box according to DIN 49073
- Operation with suitable cover

#### 3 Product characteristics

#### **Product characteristics**

- Device works according to the leading edge phase control or trailing edge phase control principle
- Automatic or manual setting of the dimming principle suitable for the load
- Display of the set operating mode by means LED
- Operation without neutral conductor possible
- Switch-on via bulb-preserving soft start
- Switch on with last saved brightness or saved switch-on brightness
- Switch-on brightness can be saved permanently
- Minimum brightness can be saved permanently
- Connection of extensions possible
- Electronic short-circuit protection with permanent switch-off after 7 seconds at the latest
- Electronic over-temperature protection

## 4 Operation

#### Switching light or adjusting brightness

Operation on the main device or a rotary dimmer extension is identical.



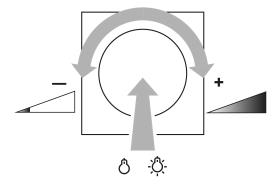


Figure 1: Switching light or adjusting brightness

- Press the setting knob briefly: Light switches on or off (Figure 1).
- Turn the setting knob quickly: Brightness is changed quickly (Figure 1).
- Turn the setting knob slowly: Brightness is changed slowly (Figure 1).

### Switching the light on at minimum or maximum brightness

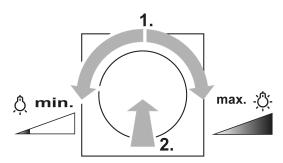


Figure 2: Switching on the light at minimum or maximum brightness

Turn the setting knob by a quarter turn, then press the setting knob briefly: Light switches on at minimum brightness or maximum brightness (Figure 2).

### Save switch-on brightness

- Adjust the brightness.
- Press the setting knob for longer than 4 seconds.
  Switch-on brightness is saved. The lighting switches briefly off and on again as confirmation.

#### Delete switch-on brightness

- Press the setting knob briefly: Light switches on at the saved switch-on brightness.
- Press the setting knob for longer than 4 seconds.
  The switch-on brightness is deleted. Switching on takes place at the last brightness value set. For confirmation, the light is switched off briefly and switched on again.

## Operation via push-button as extension

- Press briefly: Light switches on or off.
- Press long with the light switched off: Switch on at minimum brightness.
- Press long with the light switched on: Set brightness. The dimming operation stops at the appropriate end value.
- The dimming direction is changed with each new long actuation.
- i Switch-on brightness cannot be saved or deleted.



## 5 Information for electrically skilled persons

## 5.1 Fitting and electrical connection



## **DANGER!**

Mortal danger of electric shock.

Disconnect the device. Cover up live parts.

Mounting and electrical connection (Figure 3)

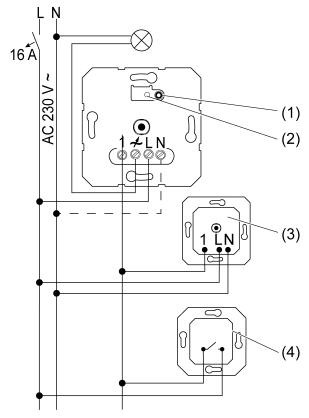


Figure 3: Connection diagram with optional extensions

- (1) Button **Dimm-Mode**
- (2) Display LED of the dimming principle
- (3) Rotary dimmer extension
- (4) Push-button, NO contact
- i Connect 600 Watt LED lamps or compact fluorescent lamps at most per 16 ampere circuit breaker. Connect 600 W LED lamps or compact fluorescent lamps at most per 16 A circuit breaker. When connecting transformers, observe the data of the transformer manufacturer.
- Our dimmers take into account the different electronic characteristics of most LED lamps found on the market. However, it cannot be guaranteed that in individual cases the desired results may not be achieved.

Operation without neutral conductor possible.

Only connect illuminated push buttons if they have a separate N terminal.



 


Figure 4: Clampable conductor cross-section

The light can be switched by briefly pressing the **Dimm-Mode** button (1).

## Reset the overheating protection / short-circuit protection

If the electronic overheating or short-circuit protection has been activated, separate the dimmer from the grid.

## 5.2 Commissioning

## Operating mode: Universal, R,L,C,LED (factory setting)

 Automatic calibration to the load, dimming principle, trailing edge phase control, leading edge phase control or LED leading edge phase control

## Operating mode: LED trailing edge phase control, LED 🔼

- Loads can be dimmed according to the trailing edge phase control principle.
- The connection of inductive transformers is not permitted.

## Operating mode: LED leading edge phase control, LED \_\_\_\_

- Loads can be dimmed according to the leading edge phase control principle.
- The connection of inductive transformers is not permitted.

#### Setting operating mode and minimum brightness

Precondition: Load is switched off.

■ Press the button **Dimm-Mode** (1) until LED (2) lights up.

LED	Dimm-Mode
GN (grün, green)	R,L,C,LED
RD (rot, red)	LED 🕮
BU (blau, blue)	LED _

Figure 5: Assignment of LED colour to dimming principle

- Keep briefly pressing button Dimm-Mode (1) until the necessary operating mode is selected.
  - The LED (2) lights up in the colour of the selected operating mode (Figure 5).
- Press the button Dimm-Mode (1) for longer than 1 second and keep it pressed.
   LED (2) flashes. Light switches on at the lowest brightness and slowly becomes brighter.
- When changing the operating mode to universal, the calibration to the load is first performed. Keep the **Dimm-Mode** button (1) pressed.
- In the lowest dimming position, a lamp light must be visible.
- Once the desired minimum brightness is reached, release the button Dimm-Mode (1).
   LED (2) lights up, operating mode and minimum brightness are set.
- Optionally change the minimum brightness again: Press the button Dimm-Mode (1) for longer than 1 second. Light switches again to the lowest brightness and slowly becomes brighter.



Save the settings: Press the button Dimm-Mode (1) for less than 1 second or do not press for 30 seconds. The LED (2) goes out.

## 6 Technical data

Rated voltage AC 230 V $^{\sim}$  Mains frequency 50 / 60 Hz Standby power approx. 0.35 W Power loss approx. 4 W Ambient temperature -5 ... +45  $^{\circ}$ C

Connected load at 25 °C: Universal (Figure 6), LED trailing edge phase control **LED** (Figure 7), LED leading edge phase control **LED** (Figure 8)

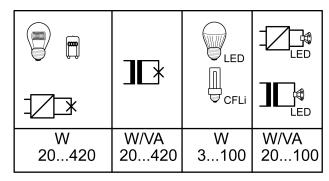


Figure 6

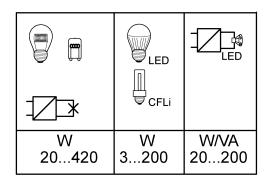


Figure 7

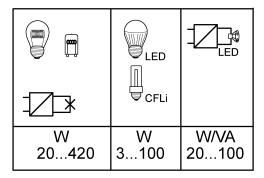


Figure 8

Mixed load ohmic-capacitive capacitive-inductive ohmic-inductive

20 ... 420 W not permitted 20 ... 420 VA



Ohmic and HV LED	typ. 3 100 W
Ohmic and compact fl lamp.	typ. 3 100 W

- i Power specifications including transformer dissipation.
- i Operate inductive transformers with at least 85% nominal load in the Universal operating mode.
- Ohmic-inductive mixed load: Max. 50% proportion of ohmic load. Otherwise, an incorrect measurement is possible.
- i Operation without neutral conductor: Minimum load 50 W. Does not apply to loads with HV-LED and compact fluorescent lamps.

#### Power reduction

per 5°C in excess of 25°C	-10%
when installed in wooden or dry construction walls	-15%
when installed in multiple combinations	-20%

Number of extension units

Rotary dimmer extension 10
Push-button unlimited

Total line length

pwr cable max. 100 m Extension max. 100 m

## 7 Troubleshooting

# Connected LED lamps or compact fluorescent lamps switch off in the lowest dimming position or flicker

Cause: The set minimum brightness is too low.

Increase minimum brightness.

#### Connected lamps do not switch on in the lowest dimming position or only after a delay

Cause: The set minimum brightness is too low.

Increase minimum brightness.

# Connected LED lamps or compact fluorescent lamps flicker or buzz, no correct dimming possible, device buzzes

Cause 1: Lamps are not dimmable.

Check manufacturer's instructions.

Exchange lamps for another type.

Cause 2: Operating mode (dimming principle) and lamps do not optimally match.

Check operation in another operating mode, reduce connected load as well if necessary. Set the operating mode manually.

Exchange lamps for another type.

Cause 3: Dimmer is connected without neutral conductor.

Connect neutral conductor if possible, otherwise exchange lamp for another type.

# Connected LED lamps or compact fluorescent lamps in the lowest dimming position are too bright; dimming range is too small

Cause 1: The set minimum brightness is too high.

Reduce minimum brightness.

Cause 2: Operating mode (dimming principle) does not optimally match the connected HV-LED lamps.



Check operation in another operating mode, reduce connected load as well if necessary. Set the operating mode manually.

Exchange HV-LED lamps for another type.

## The dimmer switches the load off briefly and then on again.

Cause: short-circuit protection has tripped but now there is no longer a fault.

#### The dimmer has switched off and the load cannot be switched on again

Cause 1: overheating protection has tripped.

Disconnect dimmer from mains by switching off circuit breaker.

LED trailing edge phase control: Reduce the connected load. Exchange lamps for another type.

LED leading edge phase control: Reduce the connected load. Check operation in the LED trailing edge phase control setting. Exchange lamps for another type.

Let dimmer cool down for at least 15 minutes.

Switch circuit breakers and dimmer on again.

Cause 2: Surge protection has triggered.

LED trailing edge phase control: Check operation in the LED leading edge phase control setting, reduce connected load as well if necessary.

Exchange lamps for another type.

Cause 3: short-circuit protection has tripped.

Disconnect dimmer from mains by switching off circuit breaker.

Eliminate short-circuit.

Switch circuit breakers and dimmer on again.

i Short-circuit protection is not based on a conventional fuse, no metallic separation of the operational current.

Cause 4: load failure.

Check load, replace light bulb. For inductive transformers, check primary fuse.

#### LED lamp is dimly lit when dimmer is switched off

Cause: LED lamp is not suitable for this dimmer.

Use a compensation module, see accessories.

Use another type of LED lamp or an LED lamp of another manufacturer.

## 8 Accessories

Compensation module LED

Art. no. 2913

## 9 Warranty

We reserve the right to make technical and formal changes to the product in the interest of technical progress.

Our products are under guarantee within the scope of the statutory provisions.

If you have a warranty claim, please contact the point of sale or ship the device postage free with a description of the fault to the appropriate regional representative.

Berker GmbH & Co. KG Klagebach 38 58579 Schalksmühle/Germany Telefon + 49 (0) 23 55/905-0 Telefax + 49 (0) 23 55/905-3111 www.berker.com