


backfit holder 3.0

installation instruction


1

What model are you installing?

Model with flange (rond 3.0) go to step 2 ([click here](#))
(compatible with wood, veneer, stone)

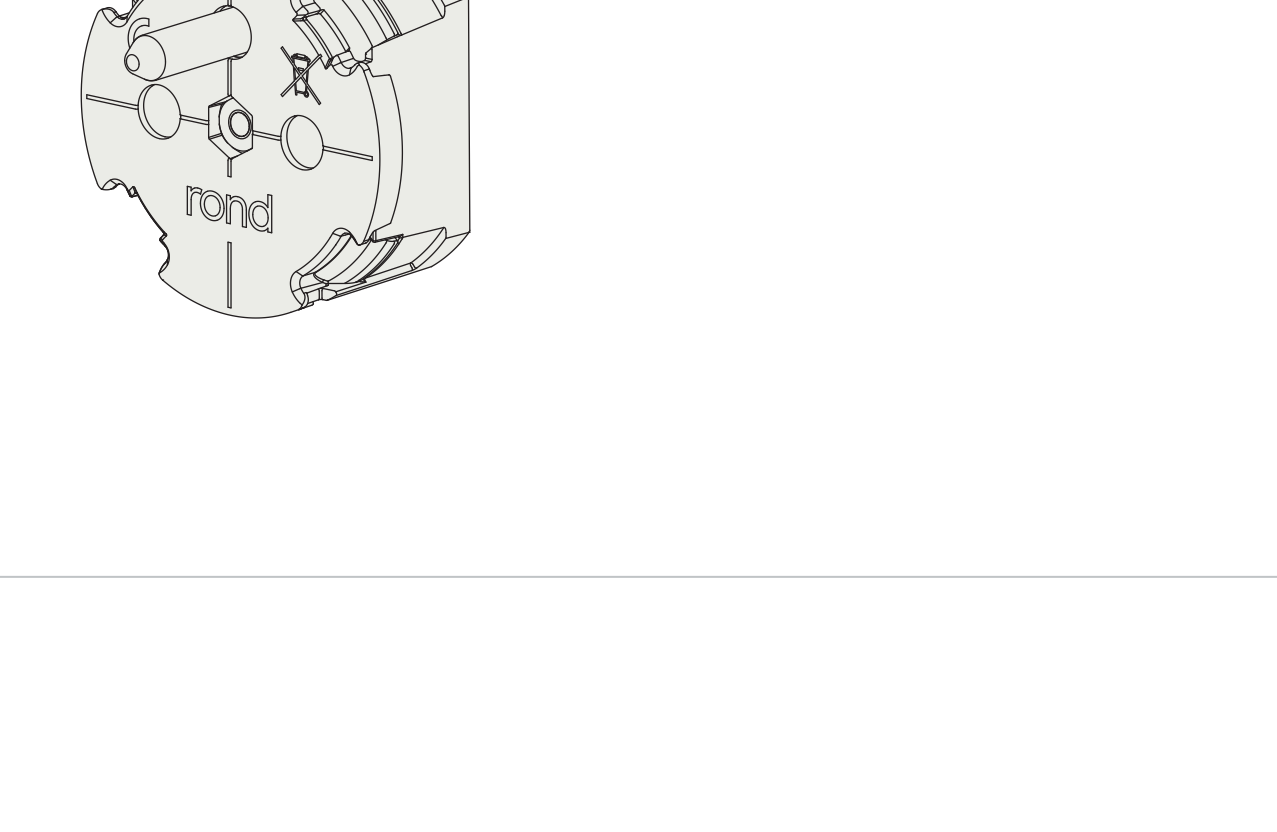


Model without flange (rond 3.0) go to step 3 ([click here](#))
(compatible with stone only)

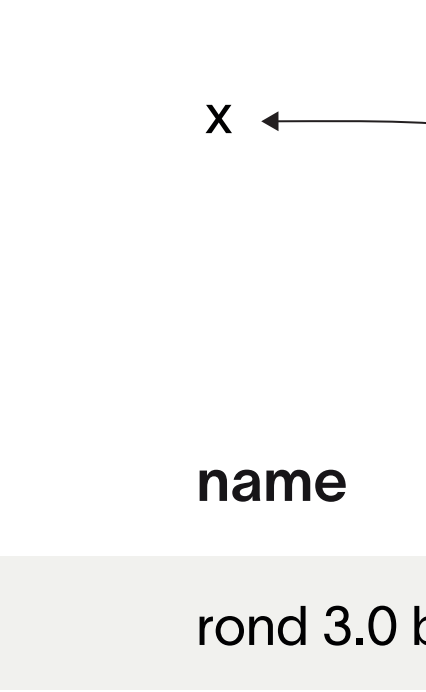

2

model with flange (rond 3.0)

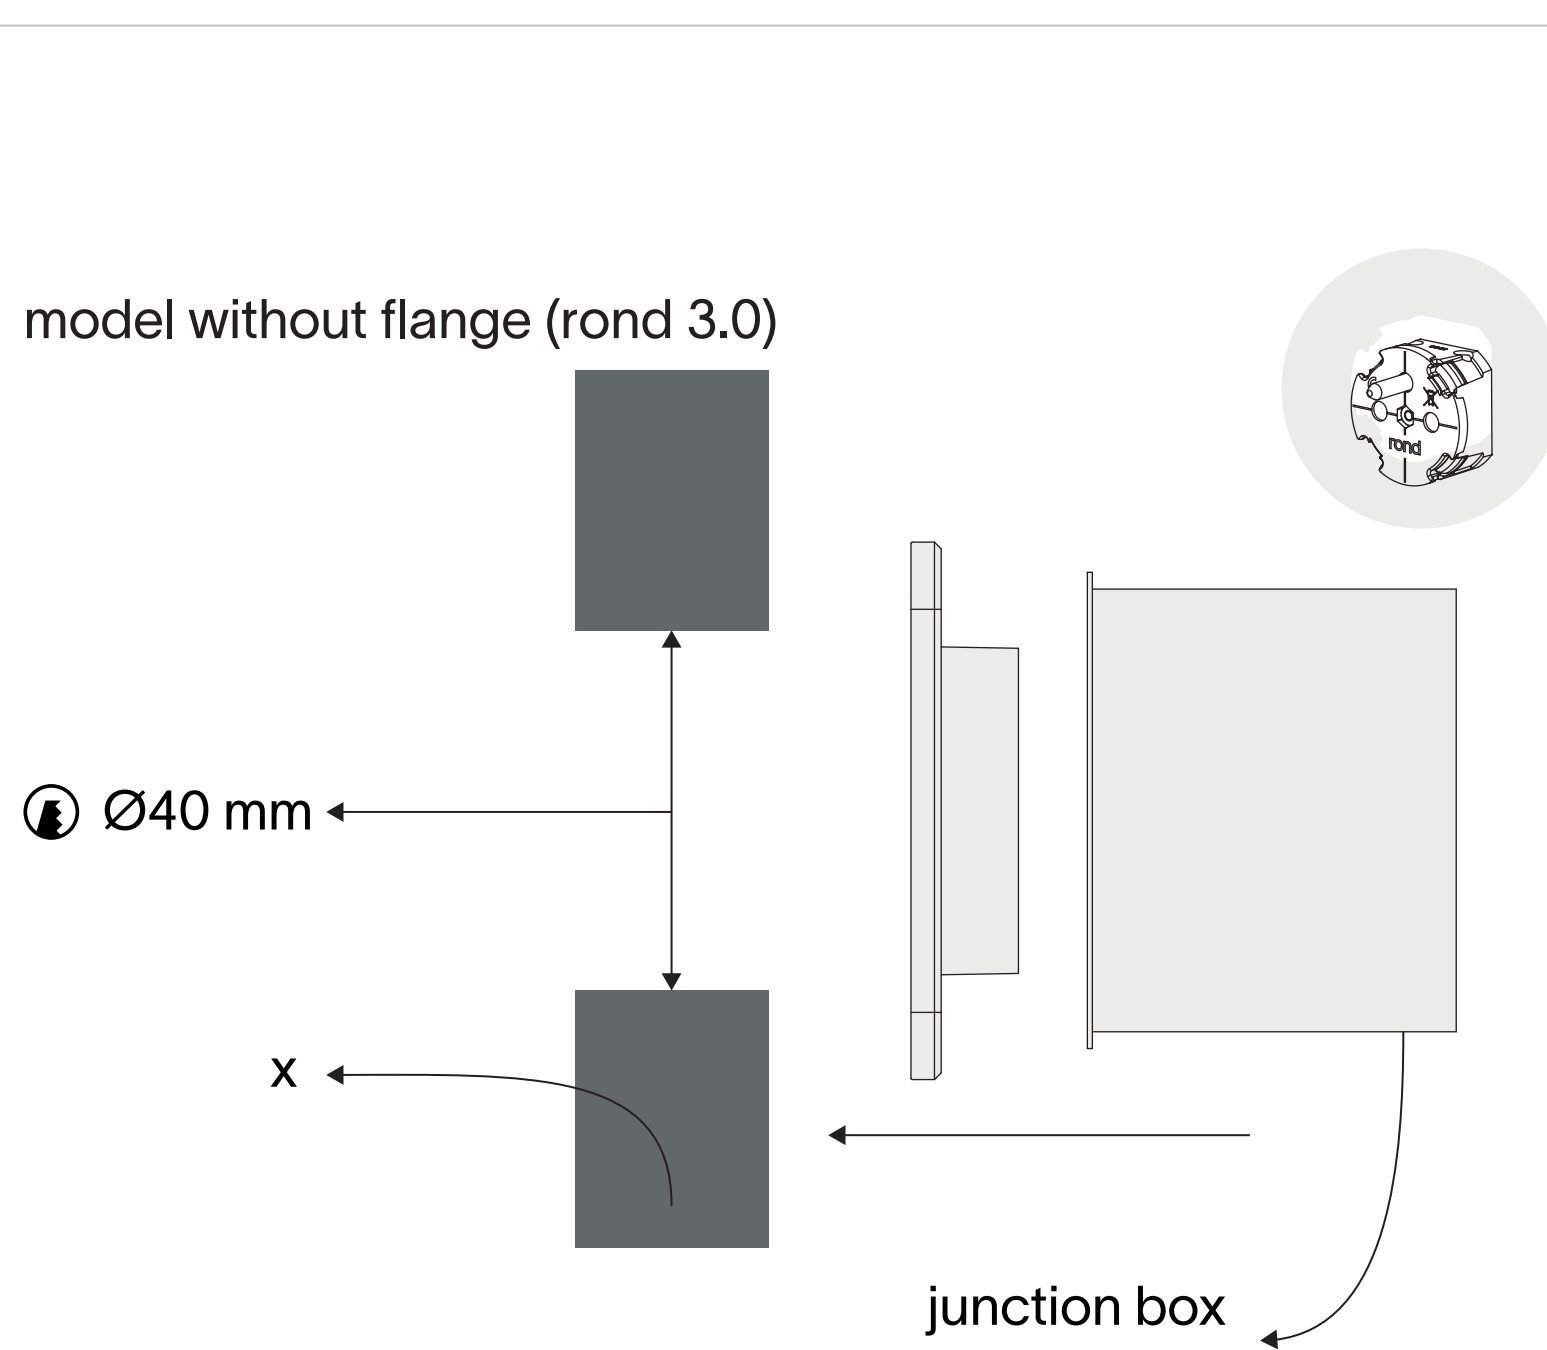


SKU	name	x
0042-0015	rond 3.0 backfit holder - 12 mm	11-13 mm
0042-0016	rond 3.0 backfit holder - 16 mm	15-17 mm
0042-0019	rond 3.0 backfit holder - 19 mm	18-20 mm
0042-0022	rond 3.0 backfit holder - 22 mm	21-23 mm

Make sure to use the correct version of the backfit holder depending on the material thickness.
Continue to step 4. ([click here](#))

3

model without flange (rond 3.0)

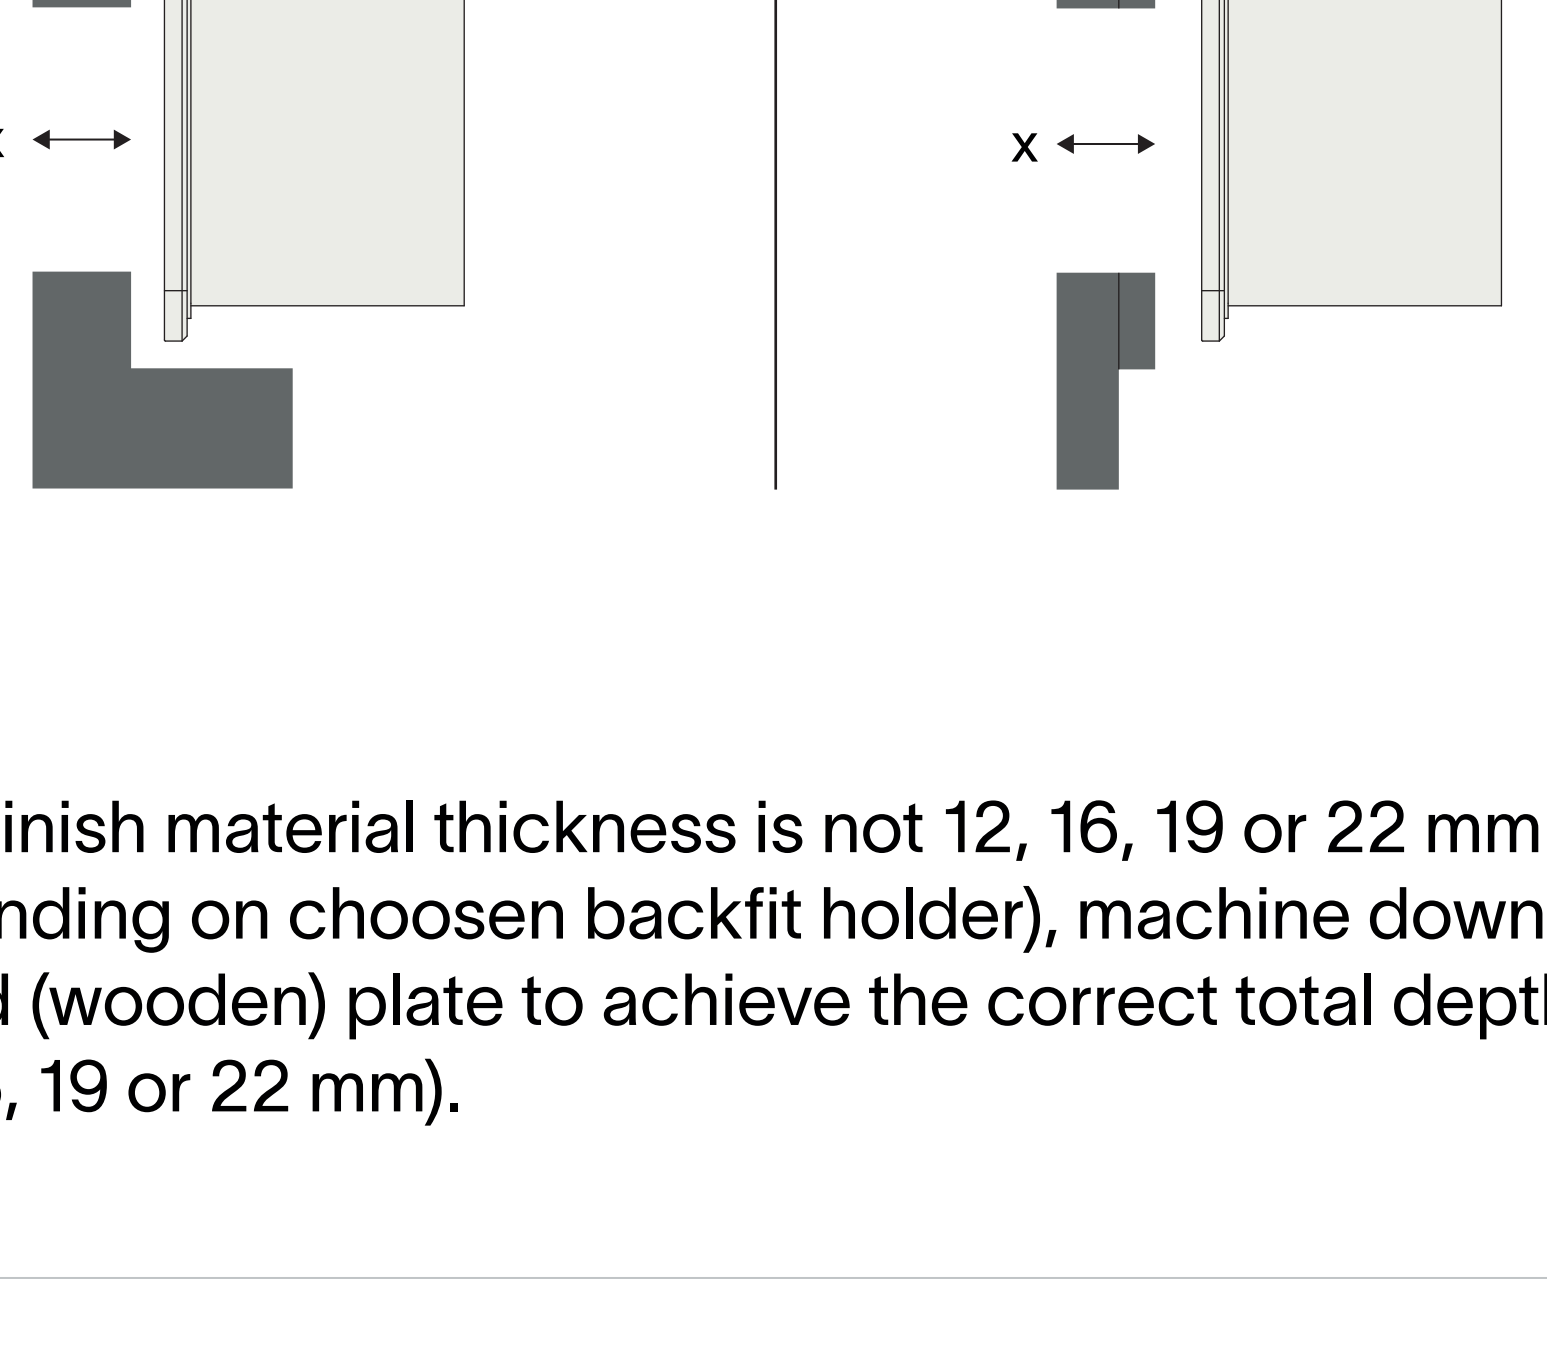


SKU	name	x
0042-0016	rond 3.0 backfit holder - 16 mm	15-17 mm
0042-0019	rond 3.0 backfit holder - 19 mm	18-20 mm
0042-0022	rond 3.0 backfit holder - 22 mm	21-23 mm

Make sure to use the correct version of the backfit holder depending on the material thickness.

4


SKU	name	x
0042-0015	rond 3.0 backfit holder - 12 mm	11-13 mm
0042-0016	rond 3.0 backfit holder - 16 mm	15-17 mm
0042-0019	rond 3.0 backfit holder - 19 mm	18-20 mm
0042-0022	rond 3.0 backfit holder - 22 mm	21-23 mm

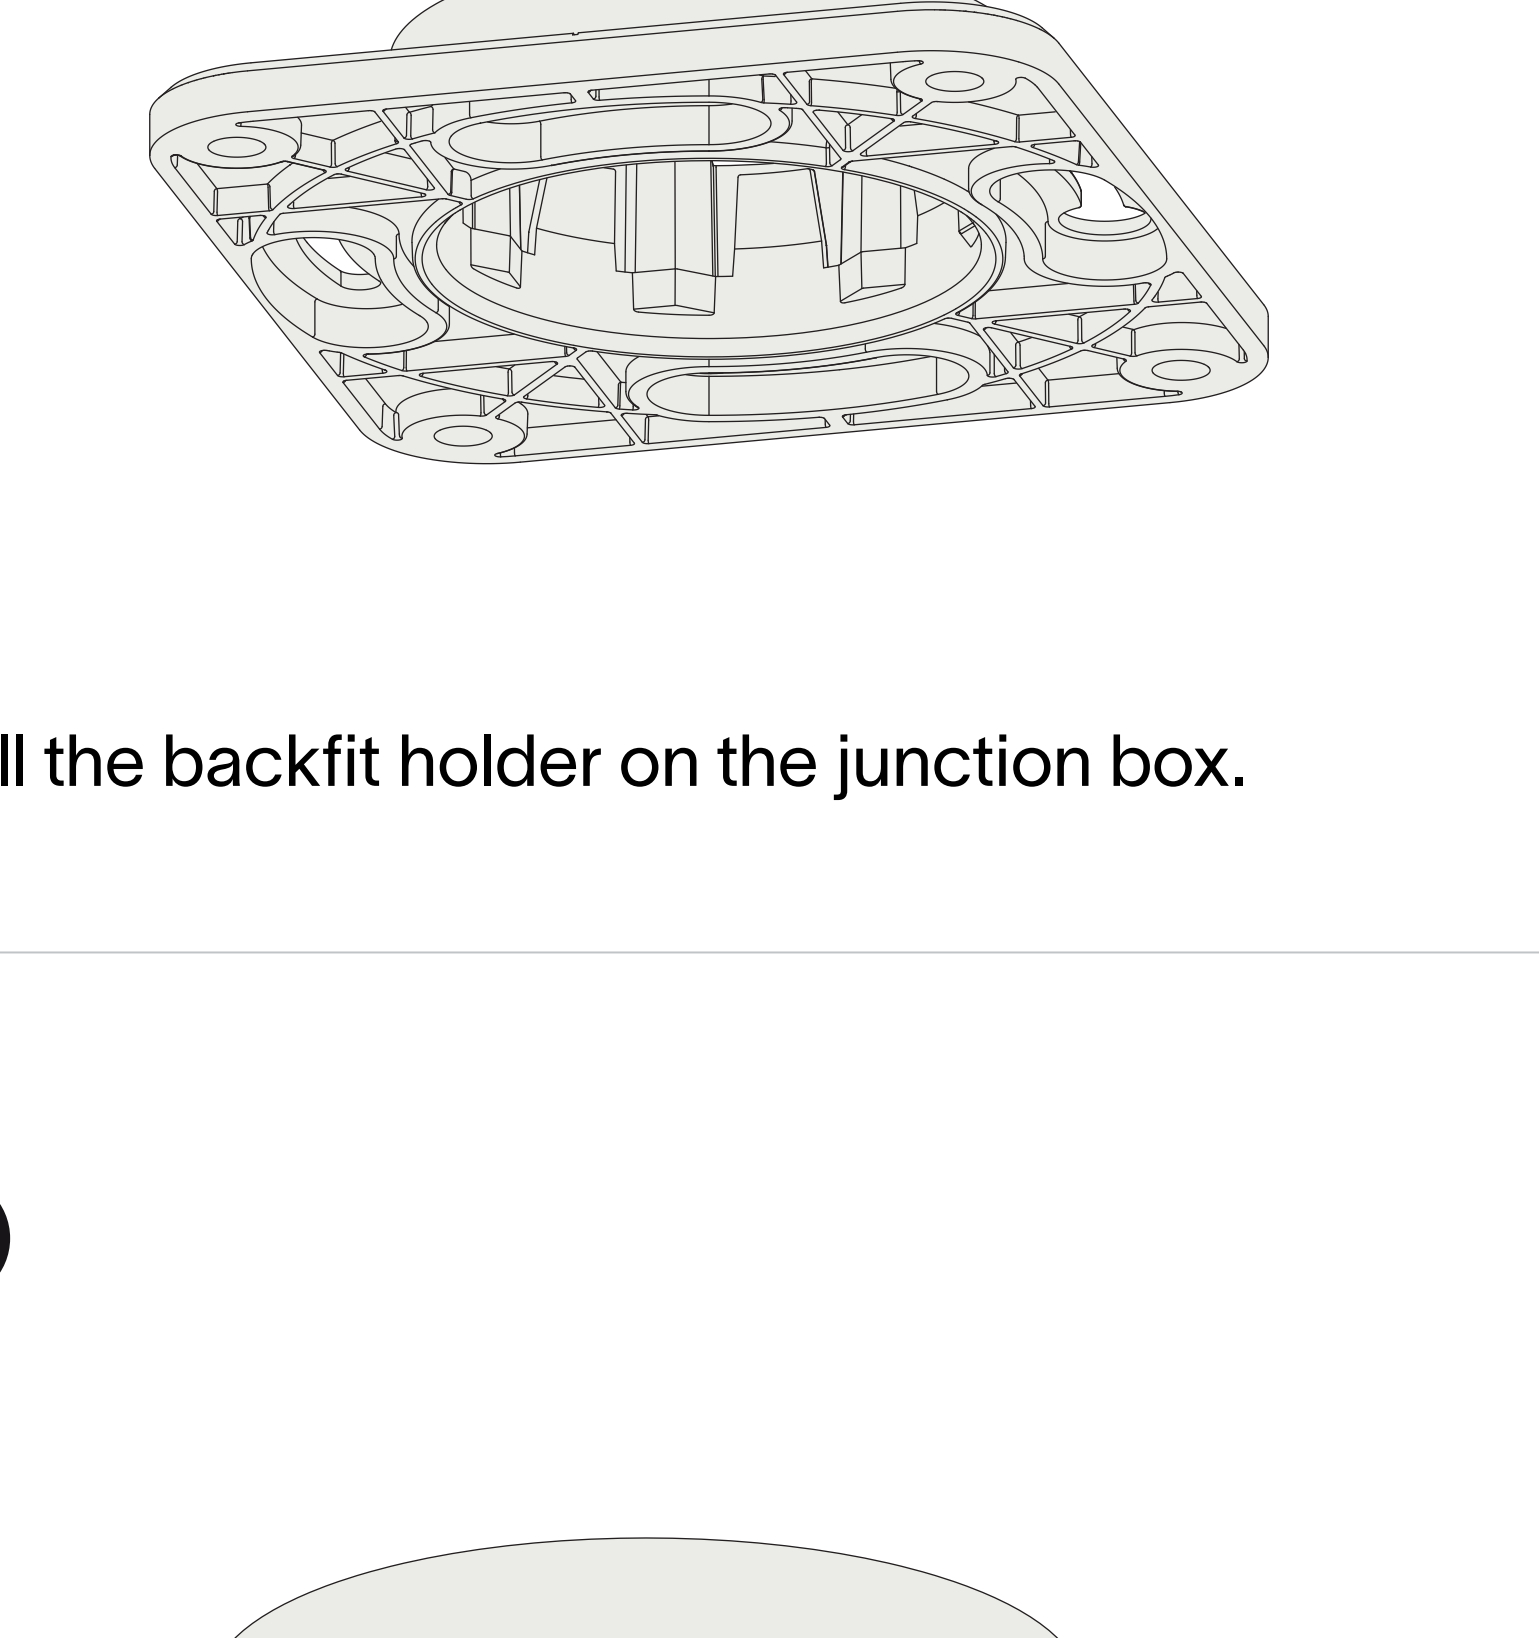


If the finish material thickness is not 12, 16, 19 or 22 mm (depending on choosen backfit holder), machine down or add (wooden) plate to achieve the correct total depth (12, 16, 19 or 22 mm).

5

for 2 or more

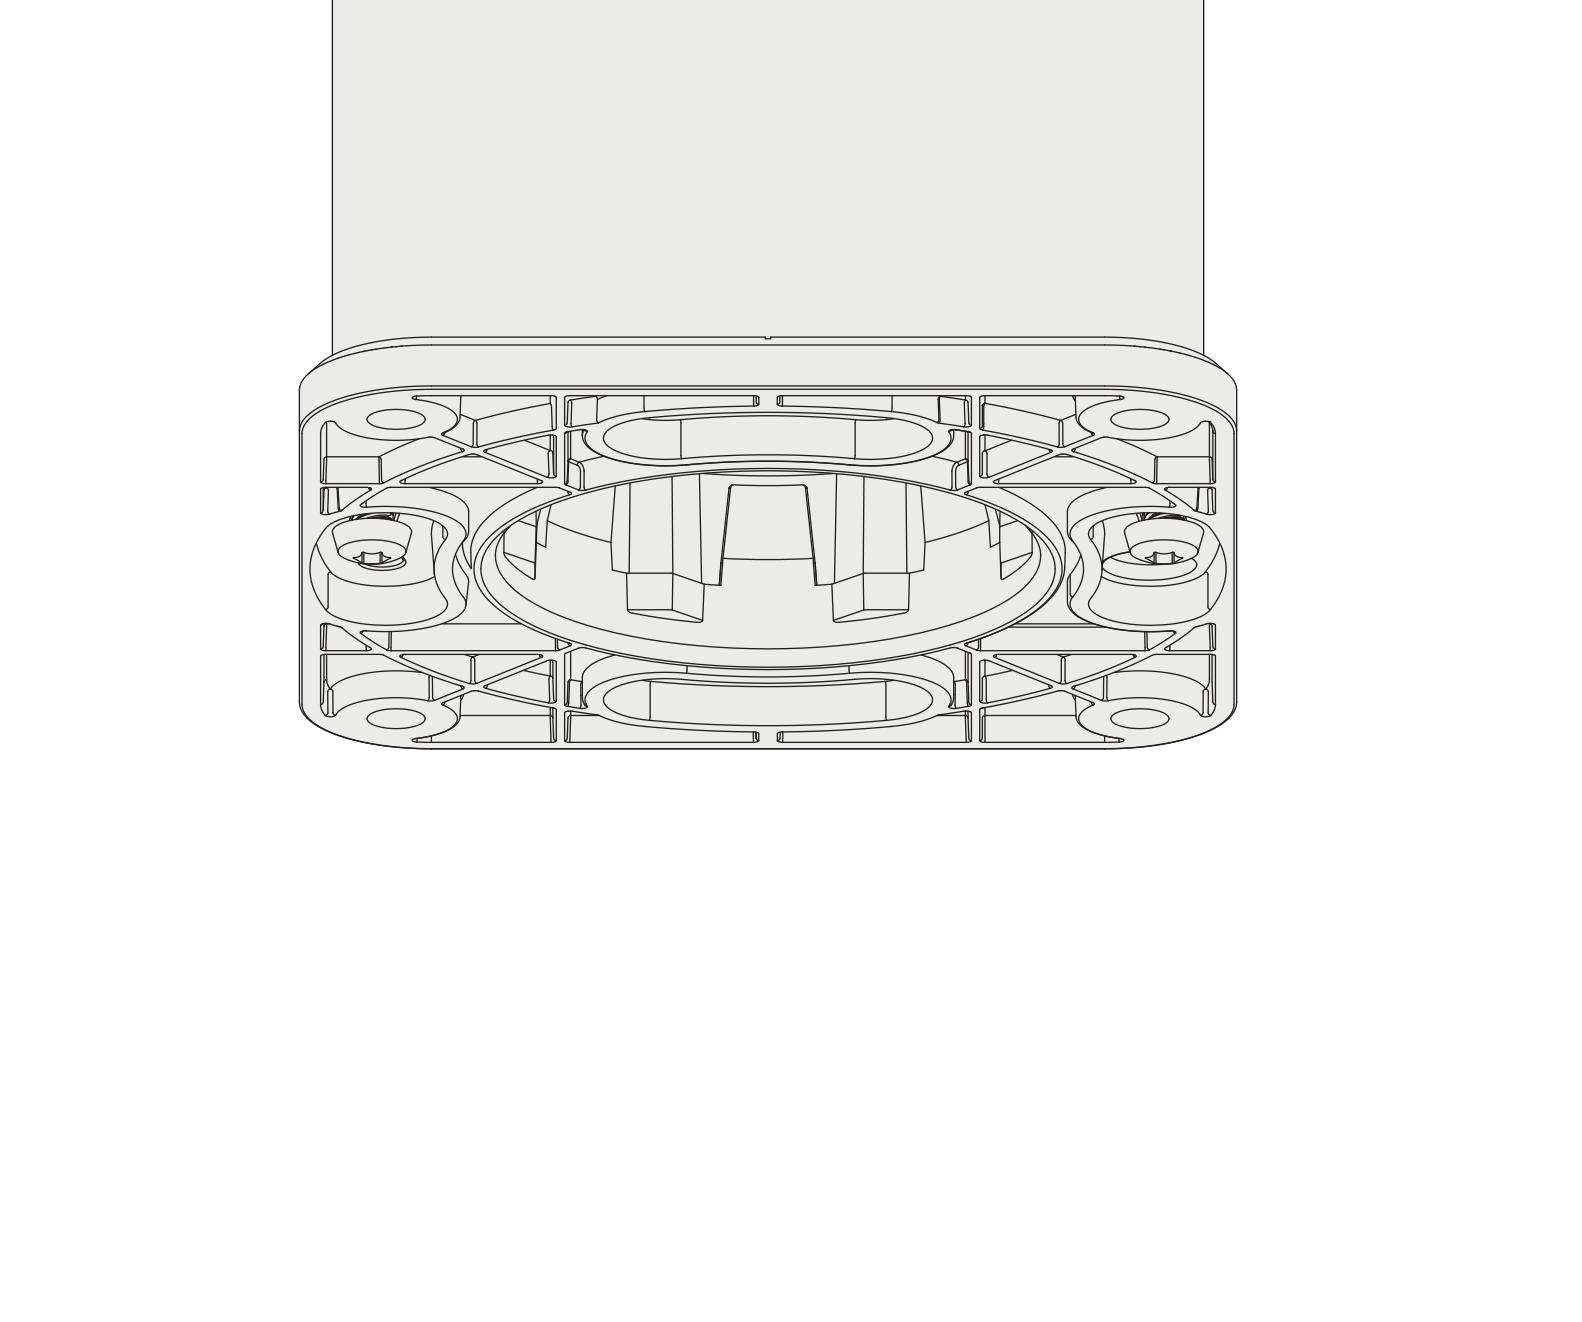


6

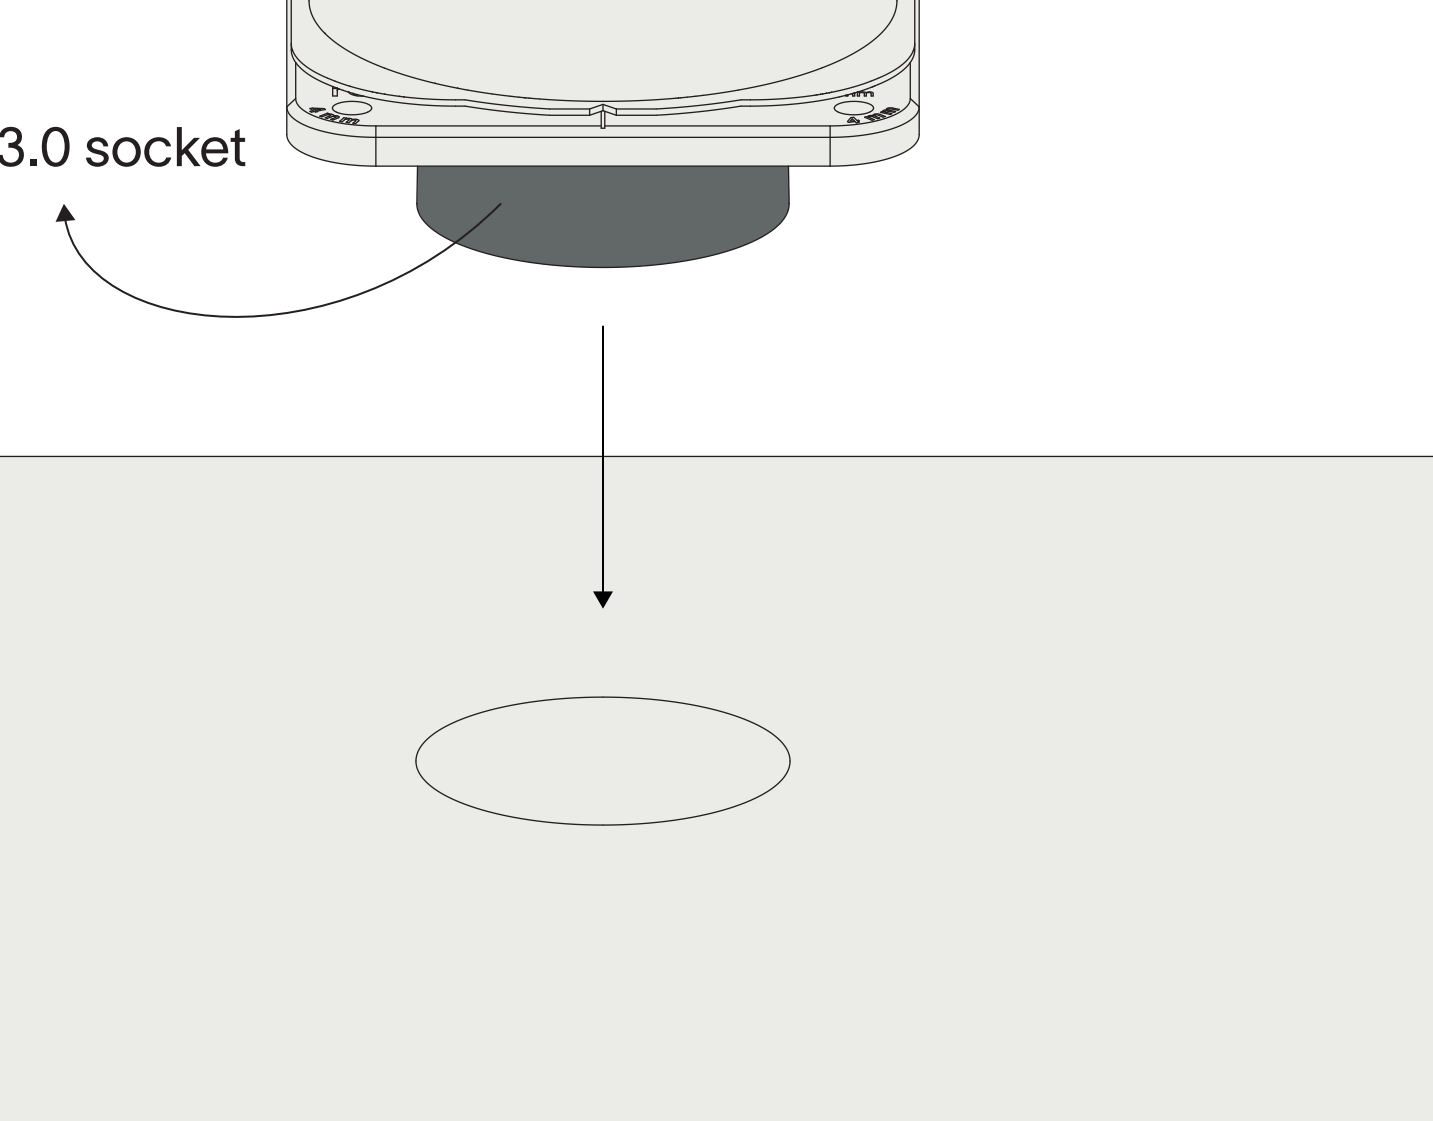


Install the backfit holder on the junction box.


7

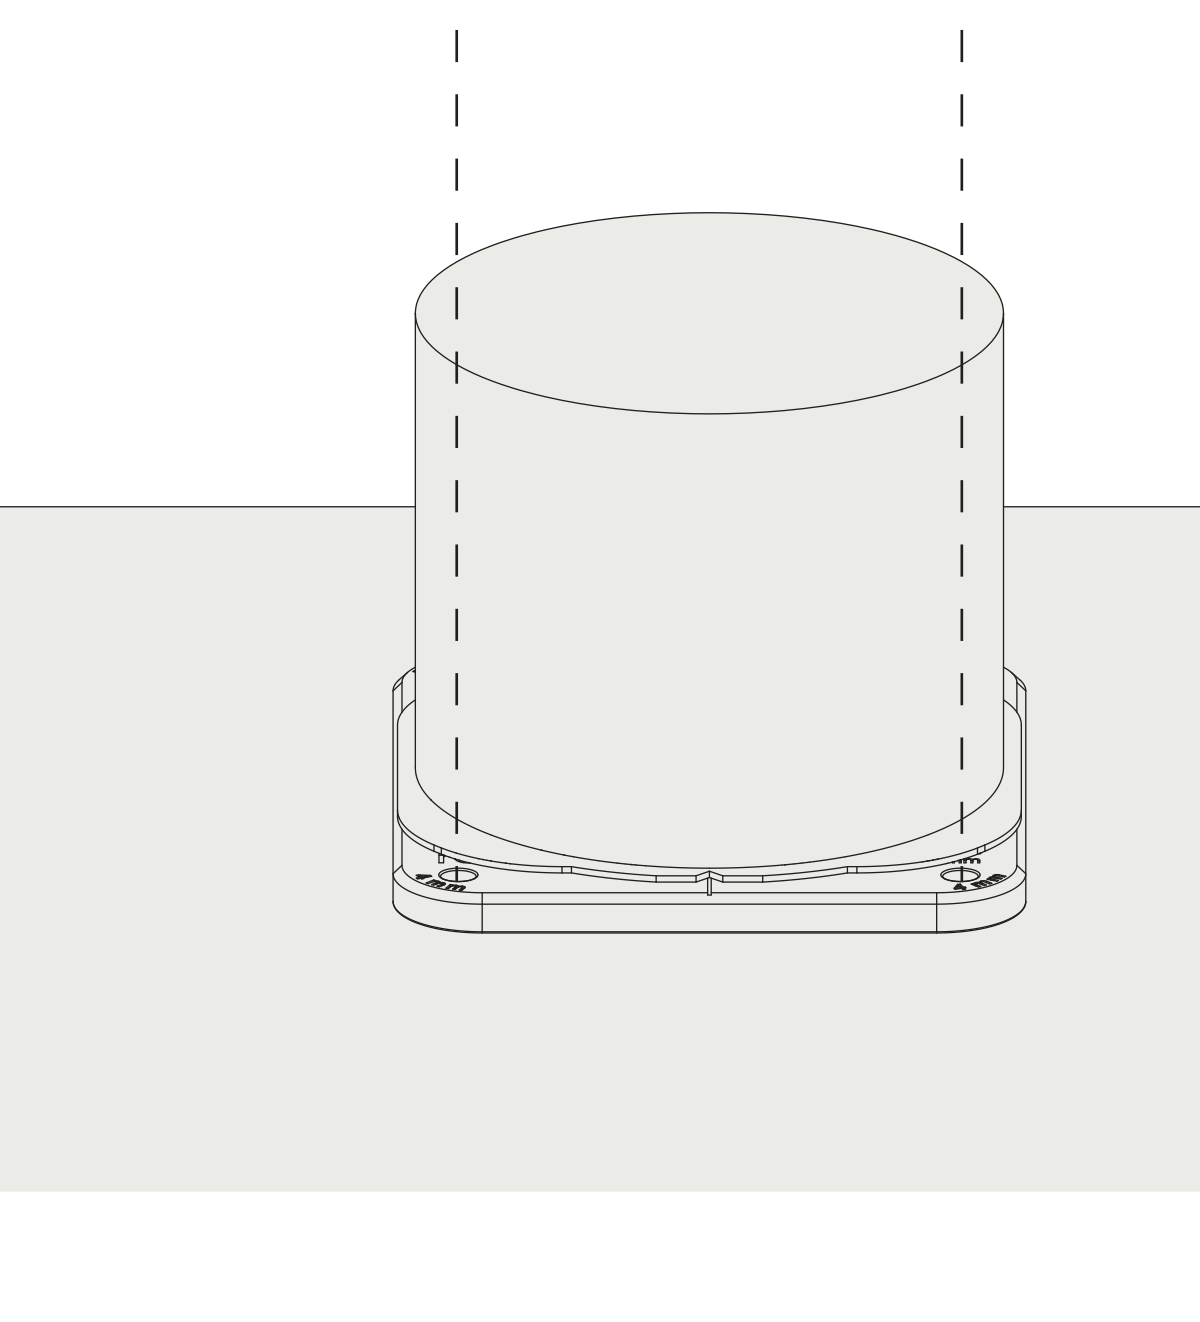

8

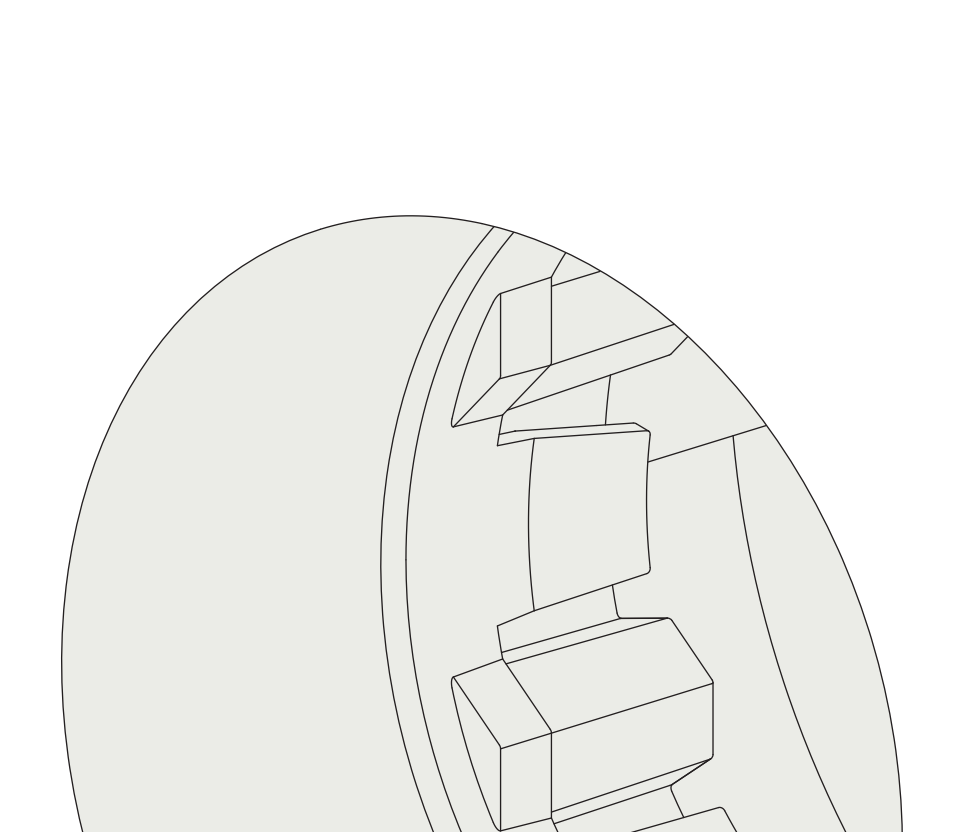

9

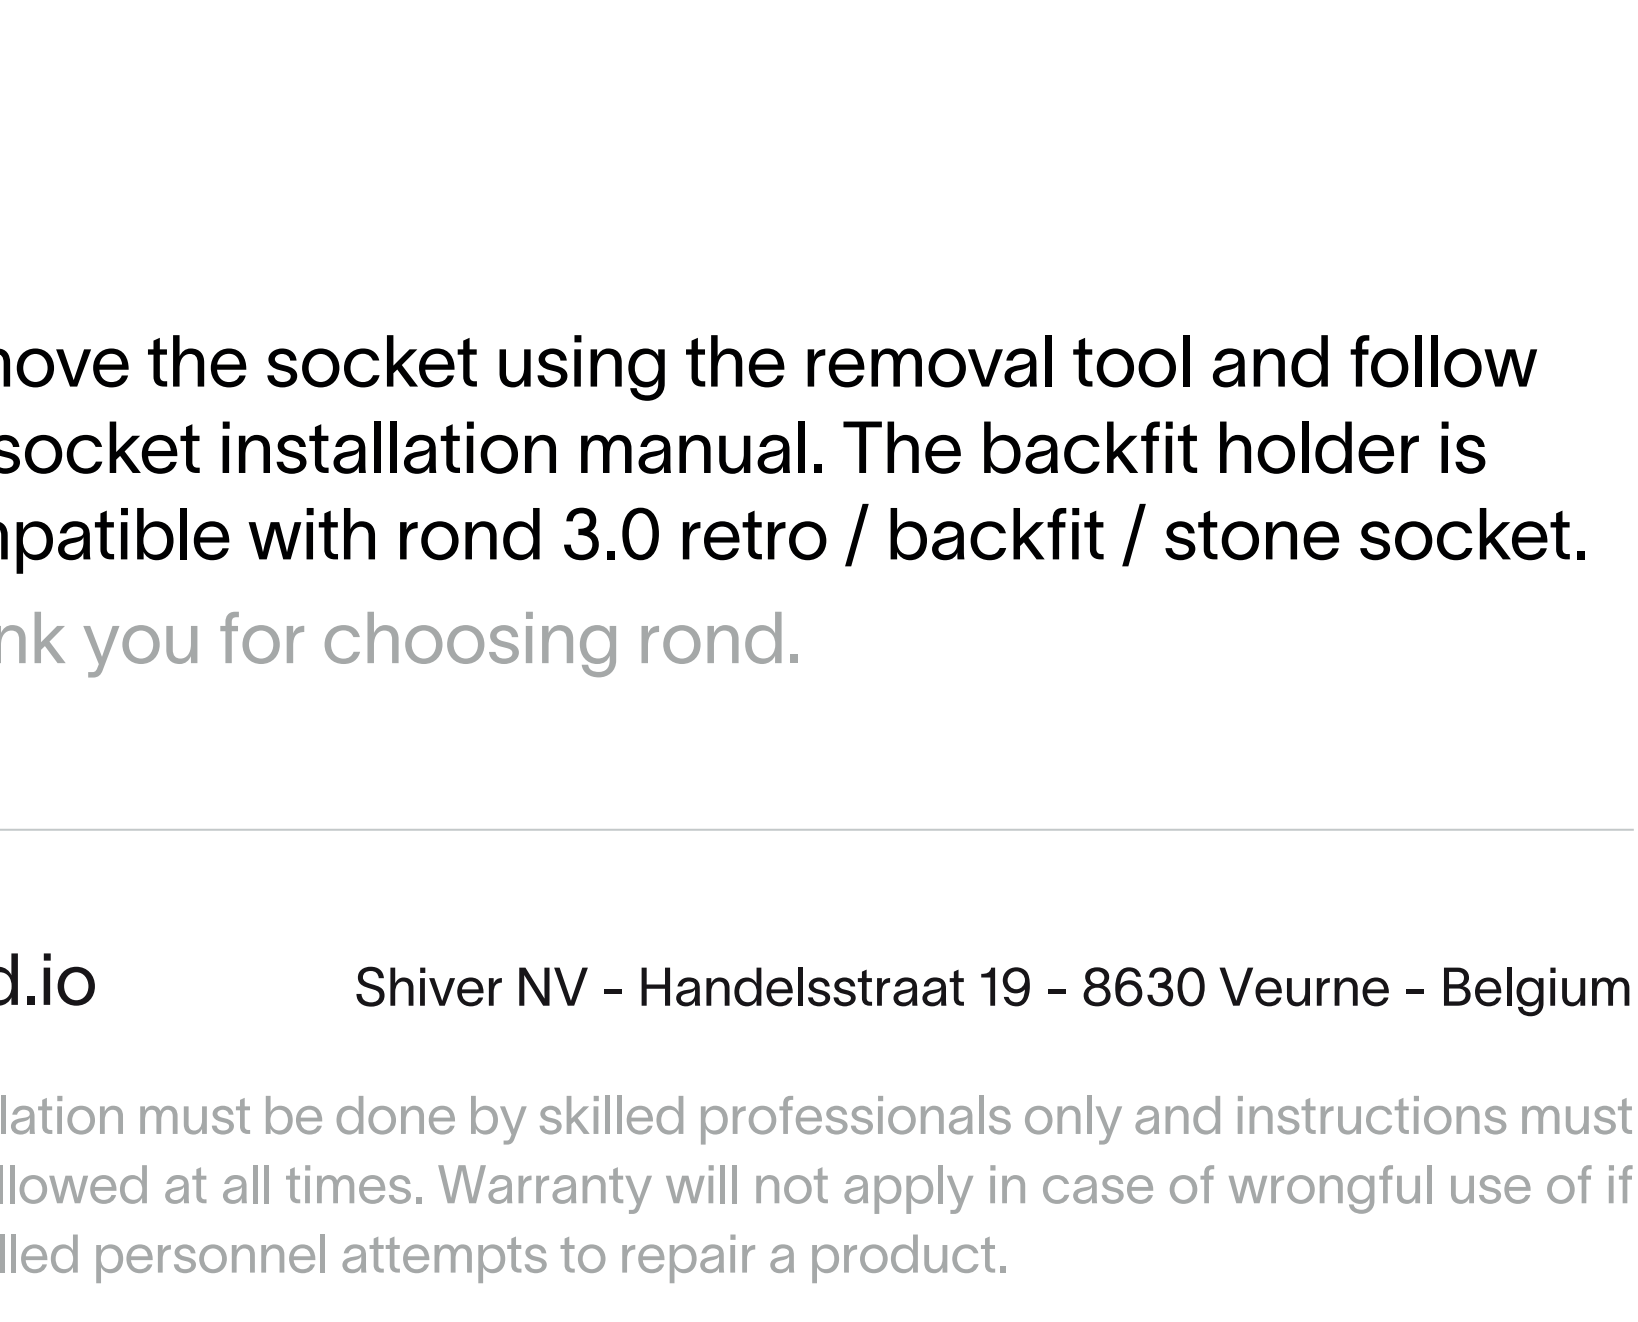

Click the socket in the holder to make alignment easier.

10

Fasten the backfit holder with junction box securely at the back of the material. Screw on a screwfast surface or use the appropriate glue, compatible with both the panel material and backfit holder material (PP + 30%GF).

11

Remove the socket using the removal tool and follow the socket installation manual. The backfit holder is compatible with rond 3.0 retro / backfit / stone socket.
Thank you for choosing rond.